



INSTALLATION INSTRUCTIONS:


- 1- Mark duct line and screw hangers into floor joists first, with one 1" long wood screw. Space duct width apart from each other.
- 2- Then hang the ducts sections and secure by using 1/2" sheet metal screws in bottom flange.

NOTE:


Used for residential applications. Use 4 hangers for every duct section . Return air supply ducts are hung flush with joists. Suppl air ducts are hung 1" below floor joists. Do not over tighten screws.

WARNING!!

Improper installation may result in damage to product or inefficiencies in the system. Use proper PPE and equipment during cutting, bending, and installation processes. If local codes differ from these instructions follow local building codes.

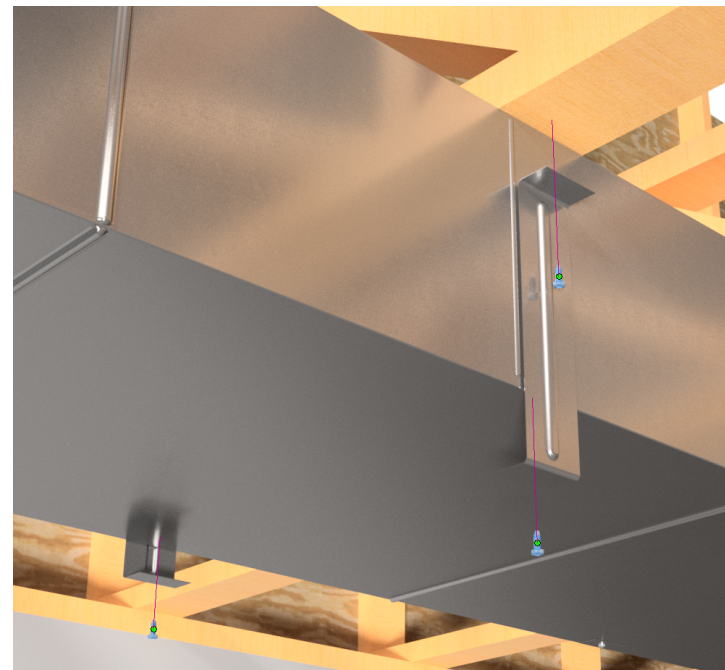

INSTALLATION VIEW

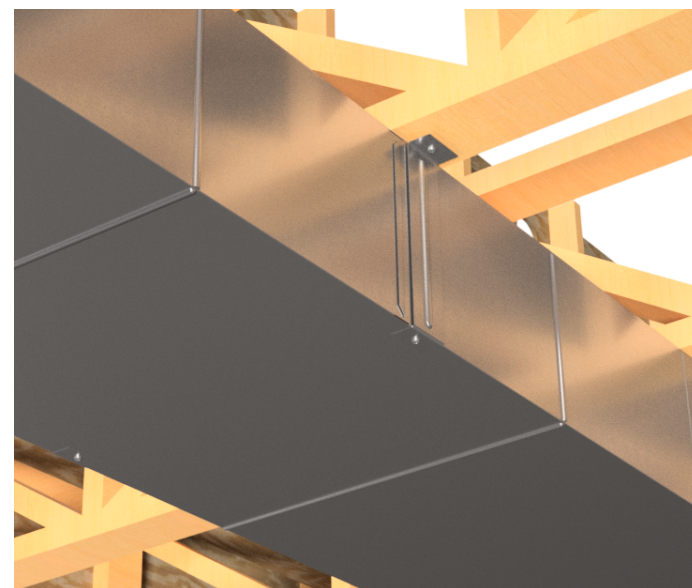

INSTALLED VIEW

[\(403\) 327-9871](tel:4033279871)

sales@tradesmanmfg.ca

www.tradesmanmfg.ca

Specifications are subject to change without notice or obligation. All Tradesman Manufacturing products are guaranteed against defective material.