

ASSEMBLED VIEW

INSTALLATION VIEW

INSTALLATION INSTRUCTIONS:


- 1- Press/Push end cap onto the end of the duct.
- 2- Use 4 sheet metal screw on all 4 sides to secure the end cap in place.
- 3- Cut

NOTE:

Industrial tape, foil, or sealer can be used. start at one corner, bend over the corners, screws/reinforced on larger ducting 20" and over

WARNING!!

Improper installation may result in damage to product or inefficiencies in the system. Use proper PPE and equipment during cutting, bending, and installation processes. If local codes differ from these instructions follow local building codes.

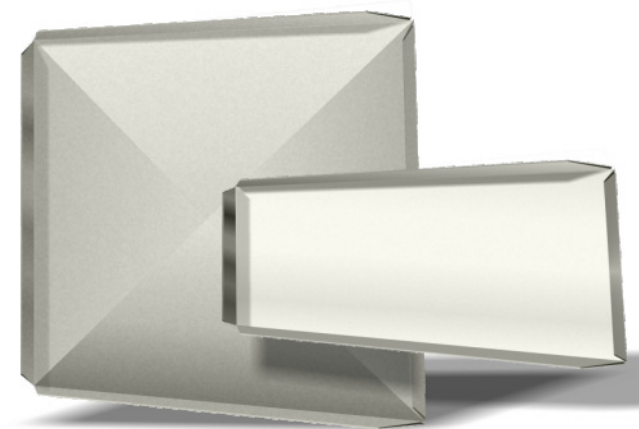

[\(403\) 327-9871](tel:(403)327-9871)

sales@tradesmanmfg.ca

www.tradesmanmfg.ca

Specifications are subject to change without notice or obligation. All Tradesman Manufacturing products are guaranteed against defective material.