

## INSTALLATION INSTRUCTIONS:


- 1- Cut hole to match base diameter of gooseneck vent and then center the vent on the hole.
- 2- Use 1" roofing nails to secure gooseneck flap to plywood.
- 3- Shingle/Finish around gooseneck according to local building codes.

### **NOTE:**

Used for residential applications. Make sure inside of the gooseneck is clear from any obstructions before installing.

### **WARNING!!**

*Improper installation may result in damage to product or inefficiencies in the system. Use proper PPE and equipment during cutting, bending, and installation processes. If local codes differ from these instructions follow local building codes.*

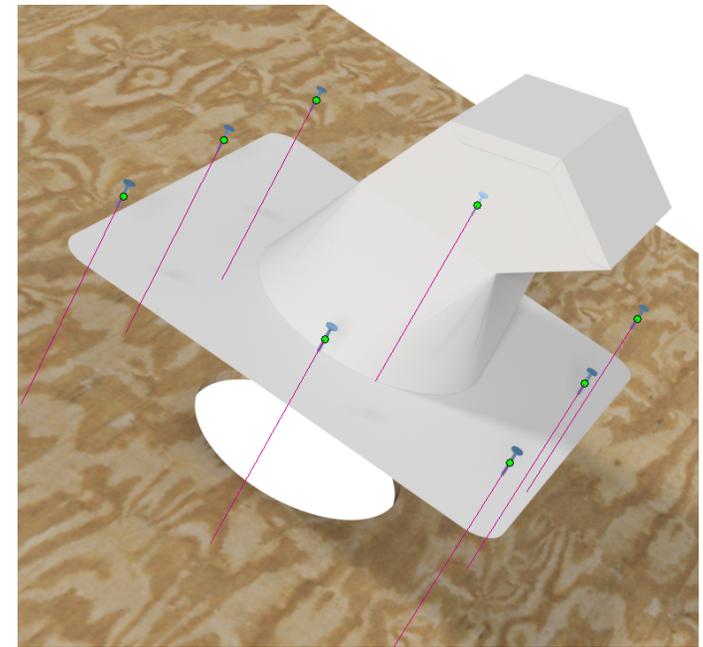

**INSTALLATION VIEW**



**INSTALLED VIEW**