

### **INSTALLATION INSTRUCTIONS:**


- 1- Cut hole 1/2" bigger than tube diameter.
- 2- Insert Hood into the hole parallel to ground, checking proper fit and damper movement.
- 3- Use 1" wood screws to secure Hood to siding, check that damper is moving freely after.
- 4- Connect other end to pipe and use 1/2" sheet metal screws to fasten into place.
- 5- Insulate according to local building codes.

### **NOTE:**

Used for residential applications. Finish/Seal around gooseneck according to local building codes.

### **WARNING!!**

*Improper installation may result in damage to product or inefficiencies in the system. Use proper PPE and equipment during cutting, bending, and installation processes. If local codes differ from these instructions follow local building codes.*

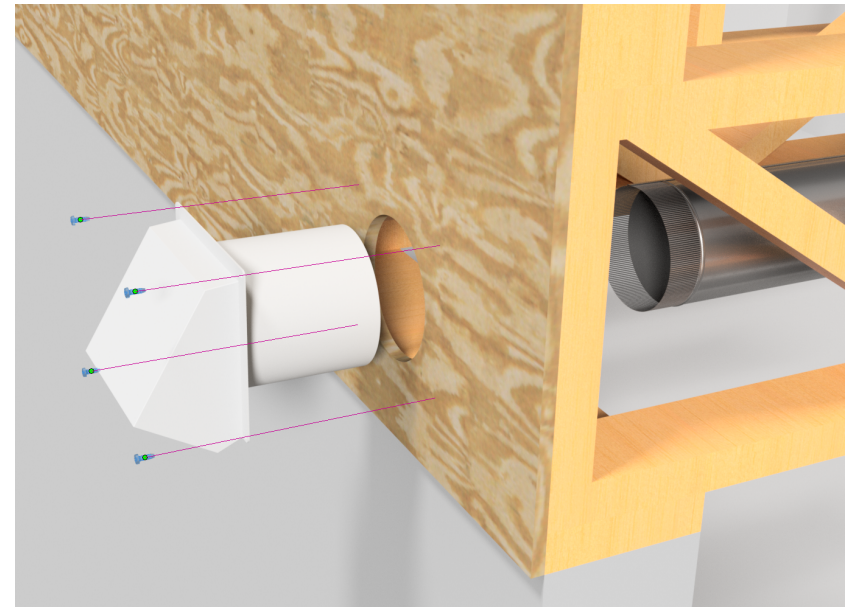

**INSTALLATION VIEW**



**INSTALLED VIEW**

[\(403\) 327-9871](tel:4033279871)

[sales@tradesmanmfg.ca](mailto:sales@tradesmanmfg.ca)

[www.tradesmanmfg.ca](http://www.tradesmanmfg.ca)