



## **INSTALLATION INSTRUCTIONS:**


- 1- Measure the length and width of the box and add framing to support on all sides.**
- 2- Use the screw holes provided with 1" countersink wood screws to secure box to framing.**

### **NOTE:**

**Used for residential applications. Industrial tape, foil, or sealer can be used.**

### ***WARNING!!***

***Improper installation may result in damage to product or inefficiencies in the system. Use proper PPE and equipment during cutting, bending, and installation processes. If local codes differ from these instructions follow local building codes.***

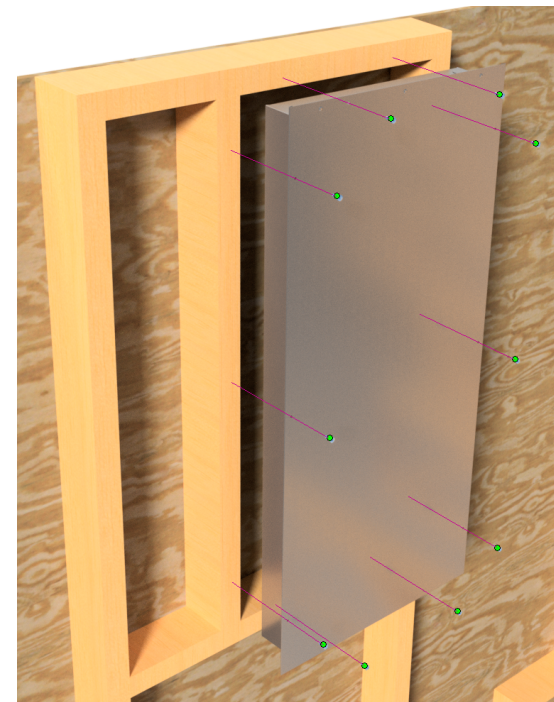

**INSTALLATION VIEW**



**INSTALLED VIEW**

[\(403\) 327-9871](tel:4033279871)

[sales@tradesmanmfg.ca](mailto:sales@tradesmanmfg.ca)

[www.tradesmanmfg.ca](http://www.tradesmanmfg.ca)

Specifications are subject to change without notice or obligation. All Tradesman Manufacturing products are guaranteed against defective material.