

INSTALLATION INSTRUCTIONS:


- 1- Pipe supports can be lightly hammered into the floor joists on an angle to support the pipe.
- 2- Can also be screwed to the floor joists with 1" wood screws.

NOTE:


Used for residential applications.

WARNING!!

Improper installation may result in damage to product or inefficiencies in the system. Use proper PPE and equipment during cutting, bending, and installation processes. If local codes differ from these instructions follow local building codes.

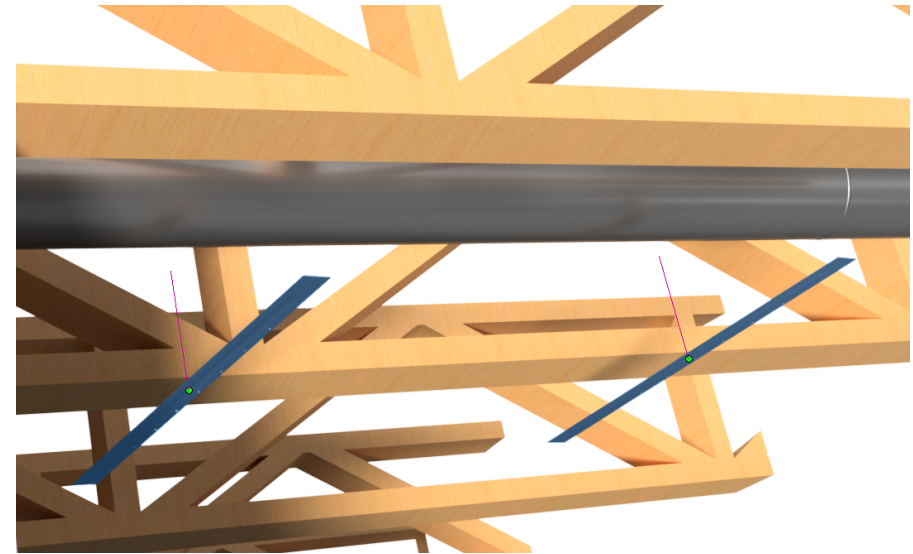

INSTALLATION VIEW

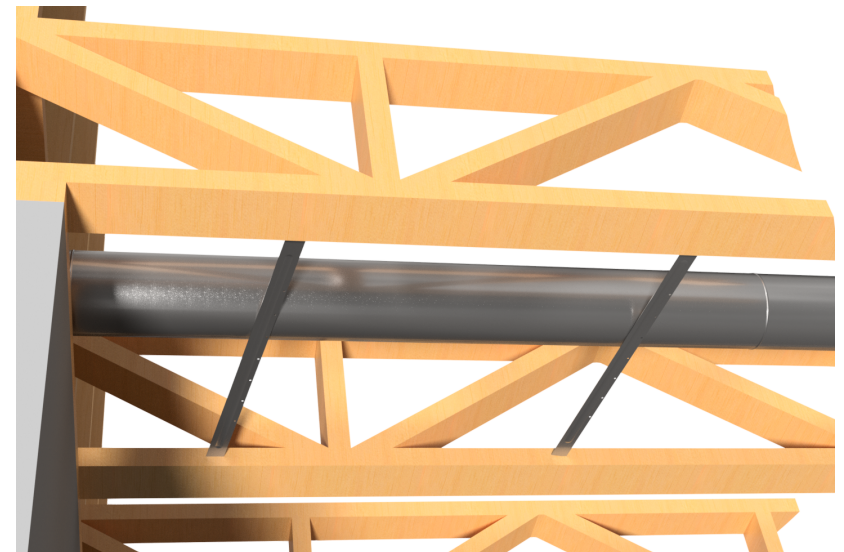

INSTALLED VIEW