

INSTALLATION INSTRUCTIONS:


- 1- Mark and cutout ducting for tap in, insert square tap in.
- 2- Bend tabs over on the inside of ducting.
- 3- Use a couple 1/2" sheet metal screws on each side flange.
- 4- Use cleats to attach ducting to other end, see cleat instructions for installation.

NOTE:


Used for residential applications. Industrial tape, foil, or sealer can be used. Make a template if doing multiple cutouts.

WARNING!!

Improper installation may result in damage to product or inefficiencies in the system. Use proper PPE and equipment during cutting, bending, and installation processes. If local codes differ from these instructions follow local building codes.

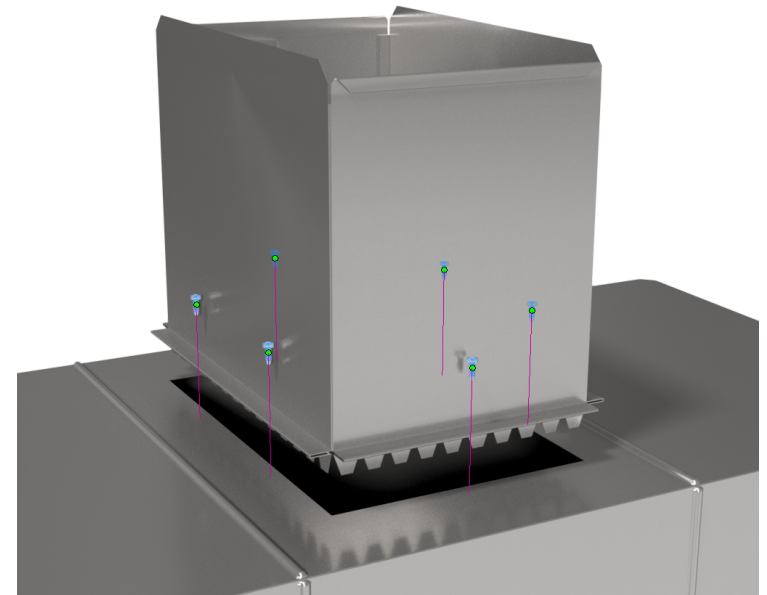

INSTALLATION VIEW

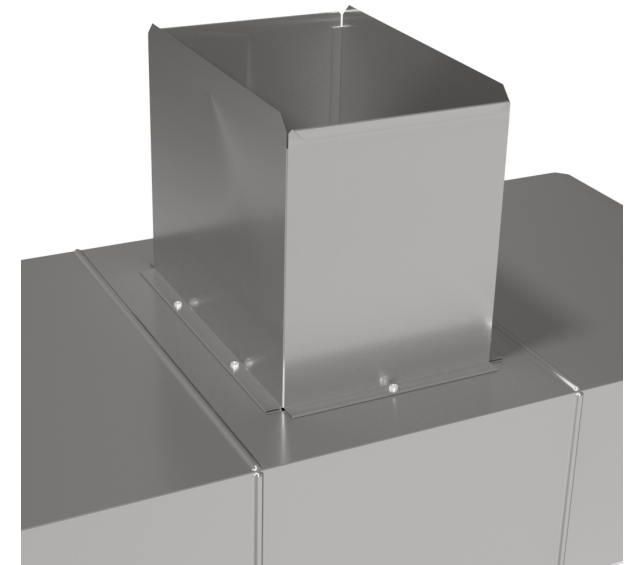

INSTALLED VIEW