



INSTALLATION INSTRUCTIONS:


- 1- Add the top and side lengths to get your total length required and cut RAD down to that length.
- 2- Cut and bend to fit around framing. If there is no backer framing for the top that will need to be added.
- 3- Use five countersink head 1" wood screws to secure flush to the framing.

NOTE:

Used for residential applications. Industrial tape, foil, or sealer can be used.

WARNING!!

Improper installation may result in damage to product or inefficiencies in the system. Use proper PPE and equipment during cutting, bending, and installation processes. If local codes differ from these instructions follow local building codes.

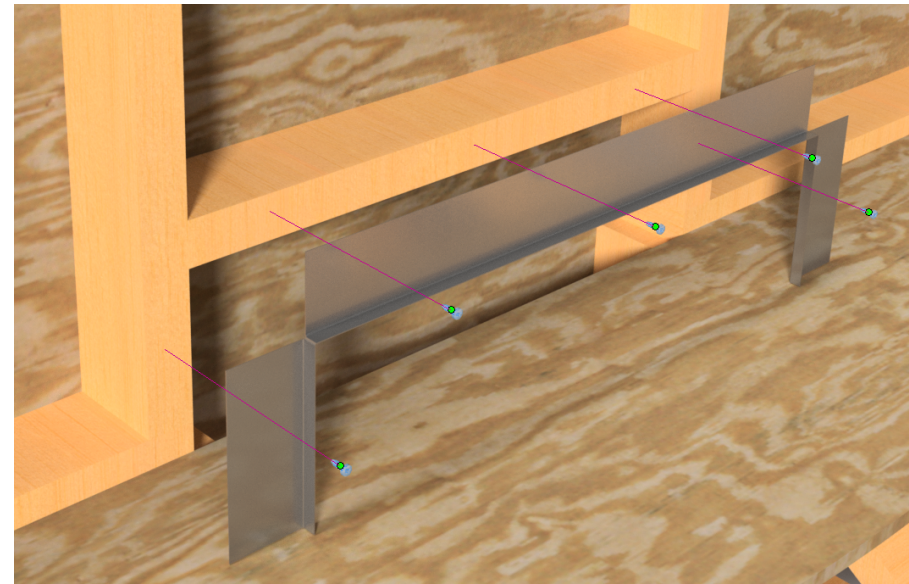

INSTALLATION VIEW



INSTALLED VIEW

[\(403\) 327-9871](tel:4033279871)

sales@tradesmanmfg.ca

www.tradesmanmfg.ca

Specifications are subject to change without notice or obligation. All Tradesman Manufacturing products are guaranteed against defective material.