

INSTALLATION INSTRUCTIONS:


- 1- Measure the diameter of the outside thimble pipe and cut a hole that size in the exterior wall.
- 2- Make sure there is sufficient framing to screw the mounting plates too.
- 3- Slide both halves together before screwing into place to ensure a proper alignment.
- 4- Use four 1" wood screws in the corner mounting holes to secure both sides of the thimble.

NOTE:


Used for residential applications. Industrial tape, foil, or sealer can be used. ??

WARNING!!

Improper installation may result in damage to product or inefficiencies in the system. Use proper PPE and equipment during cutting, bending, and installation processes. If local codes differ from these instructions follow local building codes.

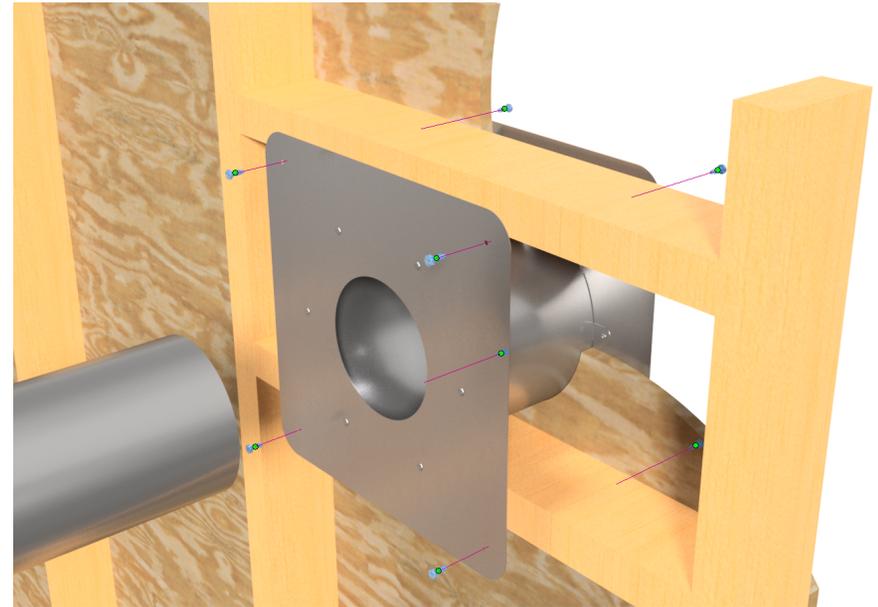

INSTALLATION VIEW

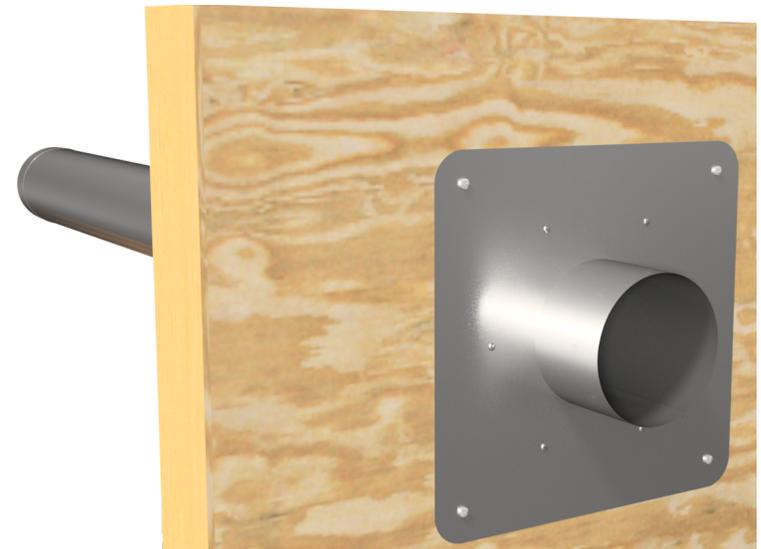

INSTALLED VIEW