

# OVAL WALL STACK PIPE



## INSTALLATION INSTRUCTIONS:


- 1- Slide crimped end of oval wall stack pipe into oval pipe until tight.
- 2- Use minimum of four 1/2" sheet metal screws to secure oval wall stack to pipe.

### **NOTE:**

Used for residential applications. Industrial tape, foil, or sealer can be used, but we recommend using metal screws to install.

### **WARNING!!**

*Improper installation may result in damage to product or inefficiencies in the system. Use proper PPE and equipment during cutting, bending, and installation processes. If local codes differ from these instructions follow local building codes.*

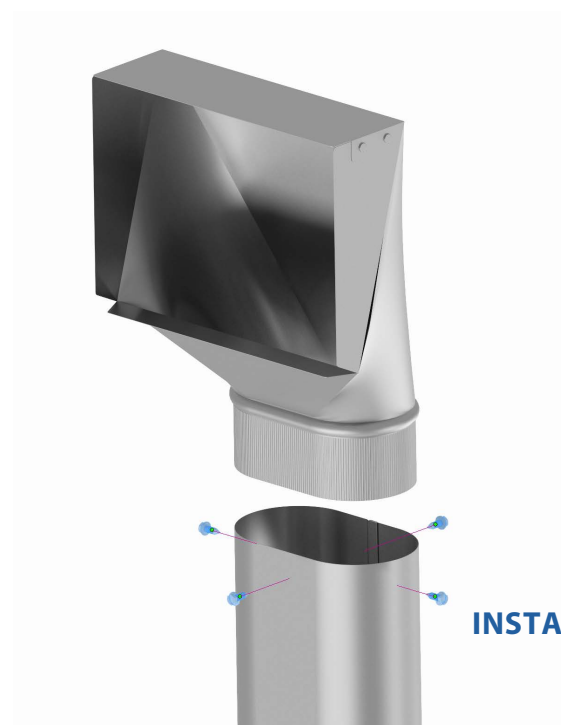

**INSTALLATION VIEW**



**INSTALLED VIEW**

[\(403\) 327-9871](tel:4033279871)

[sales@tradesmanmfg.ca](mailto:sales@tradesmanmfg.ca)

[www.tradesmanmfg.ca](http://www.tradesmanmfg.ca)

Specifications are subject to change without notice or obligation. All Tradesman Manufacturing products are guaranteed against defective material.