

INSTALLATION INSTRUCTIONS:

- 1- Slide crimped end of oval pipe into right angle boot oval until tight.
- 2- Use minimum of four 1/2" self tapping metal screws to secure.
- 3- Slide crimped end of oval wall stack pipe into oval pipe until tight.
- 4- Use minimum of four 1/2" self tapping metal screws to secure.


NOTE:

Used for residential applications. Industrial tape, foil, or sealer can be used, but we recommend using metal screws to install.

WARNING!!

Improper installation may result in damage to product or inefficiencies in the system. Use proper PPE and equipment during cutting, bending, and installation processes. If local codes differ from these instructions follow local building codes.

INSTALLATION VIEW

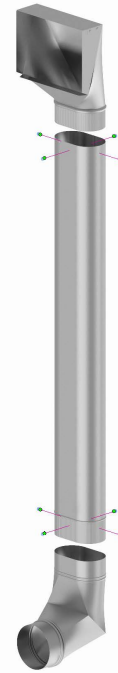

INSTALLED VIEW

